

LCD Digital display function:

| Key-press | Mode | Description |
|-----------|----------|--------------------------------------------------------------------------------------|
| [MENU] | Function | DMX control/colors selection/colors pulse/colors transition/sound control/annual set |
| [UP] | Up | Increase values |
| [DOWN] | Down | Decrease values |
| [ENTER] | Enter | Confirmation button.After pressing this button,all setting values will be saved |

Operation Instructions

| MENU | Description |
|-----------|---------------------------------------------------------------------------------|
| DO01-D512 | DMX mode,change numerical value by up and down |
| CC01-CC64 | Colors selection,select different colors by up and down |
| RB01-RB16 | Colors shade,change speed by up and down,the bigger values,the faster |
| PL01-PL16 | Colors pulse transform,change speed by up and down,the bigger values,the faster |
| SD01-SD16 | Colors transition,change speed by up and down,the bigger values,the faster |
| Sound | Sound control mode |
| R000-R255 | Manual set R,Red color brightness setting,change brightness by up and down |
| G000-G255 | Manual set G,Green color brightness setting,change brightness by up and down |
| B000-B255 | Manual set B,Blue color brightness setting,change brightness by up and down |

DMX Control Parameter Chart

| Channels | Value | Function |
|----------|---------|-------------------------------------------------------------------------------|
| CH1 | 0-255 | Color brightness control(this change should use together with CH2,CH3 or CH4) |
| CH2 | 0 | Red light off |
| | 1-255 | Red brightness from dark to bright |
| CH3 | 0 | Green light off |
| | 1-255 | Green brightness form dark to bright |
| CH4 | 0 | Blue light off |
| | 1-255 | Blue brightness from dark to bright |
| CH5 | 0-7 | No strobe flash |
| | 8-255 | Strobe flash(from slow to fast),the bigger values,the faster |
| CH6 | 0-10 | Manual control(CH1-CH5) |
| | 11-60 | Colors selection(colors contorted by CH7) |
| | 61-110 | Colors shade(colors contorted by CH7),the bigger values,the faster |
| | 111-160 | Colors pulse transform(speed contorted by GH7)the bigger values,the faster |
| | 161-210 | Colors transition(speed contorted by CH7)the bigger values,the faster |
| | 211-255 | Sound control |
| CH7 | 0-255 | Colors selection/colors shade(the bigger values,the faster) |