

FUNZIONE CANALI ED OPZIONI

CHANNEL FUNCTION AND OPTIONS

FONCTION ET OPTIONS DES CANAUX

KANALFUNKTIONEN UND-OPTIONEN

FUNCION Y OPCION DE LOS CANALES

CHANNEL	FUNCTION
1	COLOUR CHANGE
2	GOBO ROTATION
3	GOBO CHANGE
4	DIMMER / STOPPER / STROBE
5	PAN
6	TILT
7	EFFECTS

La scelta delle opzioni si effettua commutando i microswitch secondo le indicazioni sotto riportate.


Select the options by setting the microswitches as indicated.

Pour choisir les options, commutez les microswitch en fonction des indications ci-dessous.

Die Wahl der Optionen erfolgt durch Umschaltung der Mikroschalter gemäß den unten gelieferten Angaben.


Para definir las opciones, disponer los microcommutadores como se indica a continuación.

OPTIONS

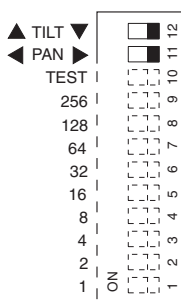


OPTION	FUNCTION
11	ON Inversione movimento orizzontale (PAN) PAN direction change OFF Inversion mouvement horizontal (PAN) Umkehr Horizontalbewegung (PAN) Invertir movimiento horizontal (PAN)
12	ON Inversione movimento verticale (TILT) TILT direction change OFF Inversion mouvement vertical (TILT) Umkehr Vertikalbewegung (TILT) Invertir movimiento vertical (TILT)

• COLOUR CHANGE - channel 1

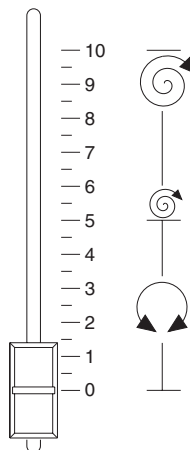


BIT	%	EFFECT
255	100	FAST ROTATION (300 rpm)
128	50.0	SLOW ROTATION (10 rph)
115	45.0	PINK 080303/106
98	38.2	BLUE 080303/101
82	32.0	ORANGE 080303/107
66	26.0	GREEN 080303/103
49	19.0	VIOLET 080303/104
33	13.0	YELLOW 080303/102
16	6.2	RED 080303/105
0	0.0	WHITE

• GOBO ROTATION - channel 2

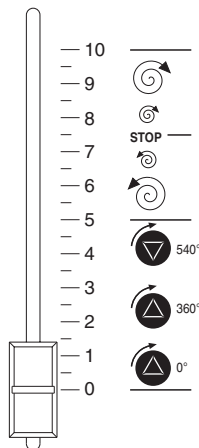

BIT	%	EFFECT
255	100	FAST ROTATION (120 rpm)
193	75.5	SLOW ROTATION (2 rph)
191 - 192	74.7 - 75.0	STOP
190	74.2	SLOW ROTATION (2 rph)
128	50.0	FAST ROTATION (120 rpm)
127	49.7	540° POSITION
105	41.7	450° POSITION
84	33.0	360° POSITION
63	24.7	270° POSITION
42	16.2	180° POSITION
21	8.2	90° POSITION
0	0.0	0° POSITION


• GOBO CHANGE - channel 3

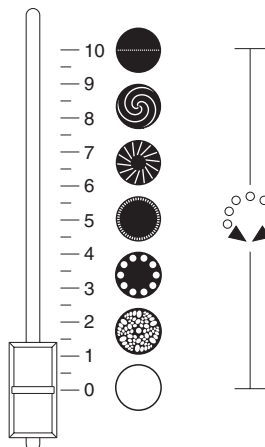

BIT	%	EFFECT
222 - 255	87.0 - 100	GOBO 6 083218/001
185 - 221	72.5 - 86.7	GOBO 5 083219/001
148 - 184	58.0 - 72.0	GOBO 4 083225/001
111 - 147	43.7 - 57.5	GOBO 3 083213/001
74 - 110	29.0 - 43.2	GOBO 2* 083105/101
37 - 73	14.2 - 28.7	GOBO 1* 083102/101
0 - 36	0.0 - 14.0	WHITE


* DICHROIC GLASS GOBOS

• DIMMER / STOPPER / STROBE - channel 4

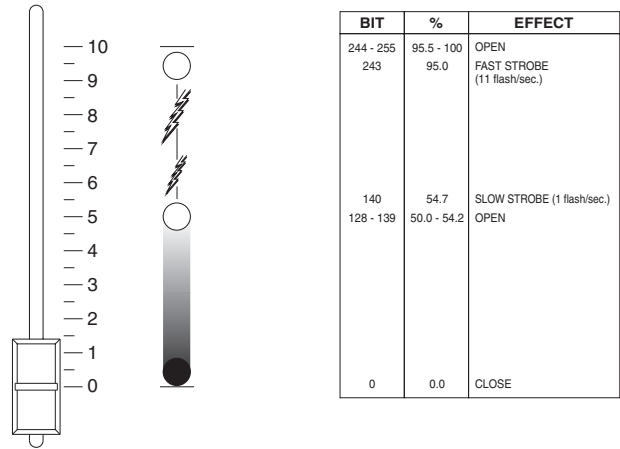


• PAN - channel 5

Operation with option 11 OFF

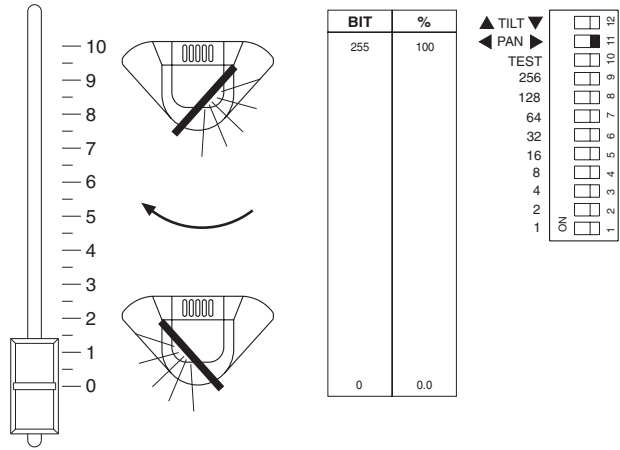


Operation with option 11 ON

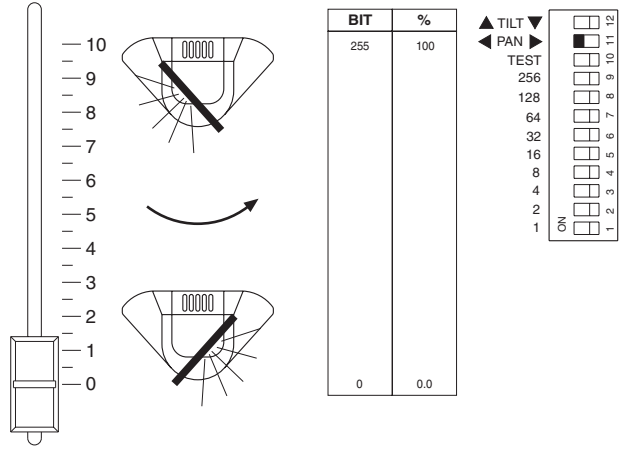


• TILT - channel 6

Operation with option 12 OFF

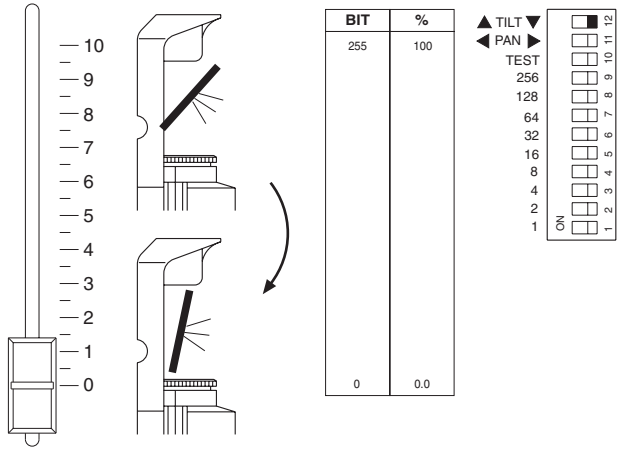

Operation with option 12 ON

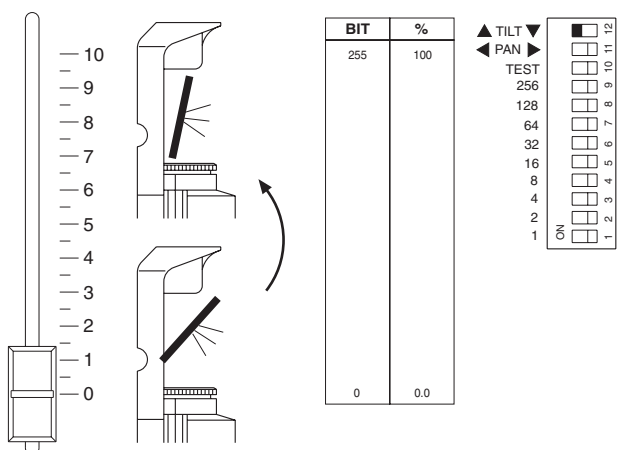

• EFFECTS - channel 7

